AV RECEIVER

Operating Instructions

GB

To cancel the demonstration (Demo) display, see page 7.

To switch the FM/AM tuning step, see page 7. For the connection/installation, see page 11.



Warning

For safety, be sure to install this unit in the dashboard of the car as the rear side of the unit becomes hot during use.

For details, see "Connection/Installation" (page 11).

The nameplate indicating operating voltage, etc., is located on the bottom of the chassis.

The validity of the CE marking is restricted to only those countries where it is legally enforced, mainly in the countries EEA (European Economic Area) and Switzerland.

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.



Disposal of waste batteries and electrical and electronic equipment (applicable in the European Union and other countries with separate collection systems)

Λ

WARNING: Do not ingest battery, Chemical Burn Hazard.

The remote commander contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Note on the lithium battery

Do not expose the battery to excessive heat such as direct sunlight, fire or the like.

Warning if your car's ignition has no ACC position

Do not install this unit in a car that has no ACC position. The display of the unit does not turn off even after turning the ignition off, and this causes battery drain.

Disclaimer regarding services offered by third parties

Services offered by third parties may be changed, suspended, or terminated without prior notice. Sony does not bear any responsibility in these sorts of situations.

Important notice

Caution

IN NO EVENT SHALL SONY BE LIABLE FOR ANY INCIDENTAL, INDIRECT OR CONSEQUENTIAL DAMAGES OR OTHER DAMAGES INCLUDING, WITHOUT LIMITATION, LOSS OF PROFITS, LOSS OF REVENUE, LOSS OF DATA, LOSS OF USE OF THE PRODUCT OR ANY ASSOCIATED EQUIPMENT, DOWNTIME, AND PURCHASER'S TIME RELATED TO OR ARISING OUT OF THE USE OF THIS PRODUCT, ITS HARDWARE AND/OR ITS SOFTWARE.

Dear customer, this product includes a radio transmitter.

Please check your vehicle operation manual or contact the manufacturer of your vehicle or your vehicle dealer, before you install this product into your vehicle.

Emergency calls

This BLUETOOTH car handsfree and the electronic device connected to the handsfree operate using radio signals, cellular, and landline networks as well as user-programmed function, which cannot guarantee connection under all conditions. Therefore do not rely solely upon any electronic device for essential communications (such as medical emergencies).


On BLUETOOTH communication

- Microwaves emitting from a BLUETOOTH device may affect the operation of electronic medical devices. Turn off this unit and other BLUETOOTH devices in the following locations, as it may cause an accident.
- where inflammable gas is present, in a hospital, train, airplane, or petrol station
- near automatic doors or a fire alarm
- This unit supports security capabilities that comply with the BLUETOOTH standard to provide a secure connection when the BLUETOOTH wireless technology is used, but security may not be enough depending on the setting. Be careful when communicating using BLUETOOTH wireless technology.
- We do not take any responsibility for the leakage of information during BLUETOOTH communication.

If you have any questions or problems concerning your unit that are not covered in this manual, consult your nearest Sony dealer.

Main Unit and Remote Commander

Main unit

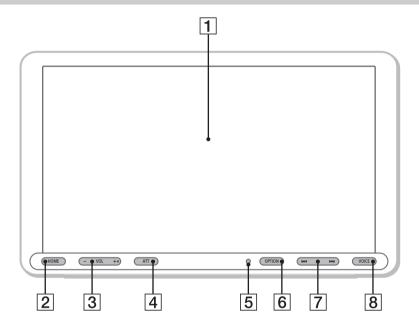

The VOL (volume) + button has a tactile dot.

1 Display/touch panel

2 HOME

Displays the HOME screen (page 6).

STANDBY

Press and hold to turn the unit to standby mode (USB charging is still available). To resume, press any button.

3 VOL (volume) +/-

4 ATT (attenuate)

Attenuates the sound.

To cancel, press again, or press VOL +.

MONITOR OFF

Press and hold to turn off the monitor.

To turn back on, touch any part of the display.

5 Receptor for the remote commander

6 OPTION

Displays the OPTION screen (page 6).

7 I◀◀/▶►I (previous/next)

Functions differently depending on the selected source:


- Radio: select a preset station.
- USB/BT Audio: move to the previous/next file.
 Press and hold to:
- Radio: tune into a station automatically (SEEK+/SEEK-).
- USB/BT Audio: fast-reverse/fast-forward.

8 VOICE

Activates the voice command function for Apple CarPlay and Android Auto $^{\rm TM}$.

RM-X170 remote commander

The remote commander can be used to operate the audio controls. For menu operations, use the touch panel.

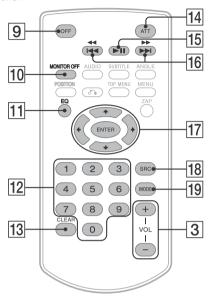

Note

The white buttons in the illustration above are not supported.

9 OFF

Turns the source off.

10 MONITOR OFF

Turns off the monitor. To turn back on, press again.

11 EQ (equalizer)

Selects an equalizer curve.

12 Number buttons (0 to 9)

13 CLEAR

14 ATT (attenuate)

Attenuates the sound. Press again to cancel the attenuation.

15 ►II (play/pause)

16 I◀◀ /▶▶I (previous/next)

◄◄/▶► (fast-reverse/fast-forward)

Functions differently depending on the selected source:

- Radio: select a preset station.
- USB/BT Audio: move to the previous/next file.
 Press and hold to:
 - Radio: tune into a station automatically (SEEK+/SEEK-).
- USB/BT Audio: fast-reverse/fast-forward.

17 ←/1/↓/→

Functions differently depending on the selected source.

- Radio: select a preset station or tune into a station automatically.
- USB: select a folder or move to the previous/ next file.

ENTER

Enters the selected item.

18 SRC (source)

Changes the source. Each time you press this button, a selectable source is displayed in a popup on the current display.

19 MODE


Selects the radio band.

Remove the insulation film before use.




Screen displays


Playback screen:

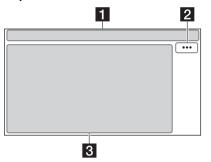

HOME screen:

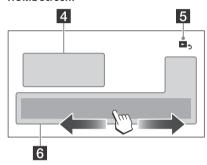

OPTION screen:

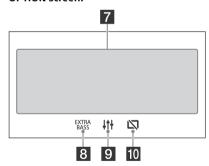

Status indication

■ ATT	Lights up when the sound is attenuated.					
8	Lights up when the Bluetooth® signal is on. Flashes when the connection is in progress.					
N _W	Lights up when the audio device is playable by enabling the A2DP (Advanced Audio Distribution Profile).					
<u>"</u>	Lights up when handsfree calling is available by enabling the HFP (Handsfree Profile).					
Yuu	Indicates the signal strength status of the connected mobile phone.					
(W)	Indicates the remaining battery status of the connected mobile phone.					

2 ··· (source option)

Opens the source option menu. The available items differ depending on the source.

3 Application specific area

Displays playback controls/indications or show the unit's status. Displayed items differ depending on the source.

4. Clock

Displays the time which are set on the Date/ Time setting.

5 (return to the playback screen)

Switches from the HOME screen to the playback screen.

6 Sources and Settings select keys

Changes the source or make various settings. Flick to select the setting icon and other icons. Touch the source icon you want to select.

(a)	Android Auto	(Apple CarPlay	6	Radio
8	BT Audio	4	Phone		USB
0	Rear Camera	±	Settings	0	WebLink

7 Sound select keys

Changes the sound.

8 EXTRA (EXTRA BASS)

Changes the EXTRA BASS setting.

9 Lt+ (EQ10/Subwoofer)

Changes the EQ10/Subwoofer setting.

10 (monitor off)

Turns off the monitor. When the monitor is turned off, touch any part of the display to turn it back on.

Basic Operations

Switching the FM/AM Tuning Step

Set the FM/AM tuning step of your country.

- Press HOME, touch [Settings] → [General] → [Tuning Steps], then set the FM/AM tuning step.
- 2 To exit the setup menu, touch (back) three times.

Pairing with a BLUETOOTH Device

When connecting a BLUETOOTH device for the first time, mutual registration (called "pairing") is required. Pairing enables this unit and other devices to recognize each other.



- 1 Press HOME, then touch [Settings] → [Bluetooth] → [Bluetooth Connection] → [ON] → [Pairing].
 - **3** flashes while the unit is in pairing standby mode.
- 2 Perform pairing on the BLUETOOTH device so it detects this unit.
- 3 Select your model name shown on the display of the BLUETOOTH device*.

input [0000].

When pairing is made, **3** stays lit.

* If passkey input is required on the BLUETOOTH device.

Connecting Rear View Camera

By connecting the optional rear view camera to the CAMERA IN terminal, you can display the picture from the rear view camera. For details, see "Connection/Installation" (page 11).

To display the picture from the rear view camera

Press HOME, then touch [Rear Camera].

Canceling the Demonstration Mode

- 1 Press HOME, then touch [Settings].
- 2 Touch [General], then touch [Demo] to set to [OFF].
- 3 To exit the setup menu, touch (back) twice.

Updating the Firmware

To update the firmware, visit the support site on the back cover, then follow the online instructions.

Note

During the update, do not remove the USB device.

Additional Information

Precautions

- Power antenna (aerial) extends automatically.
- When you transfer ownership or dispose of your car with the unit installed, initialize all the settings to the factory settings by performing the factory reset.
- Do not splash liquid onto the unit.

Notes on safety

- Comply with your local traffic rules, laws, and regulations.
- While driving
- Do not watch or operate the unit, as it may lead to distraction and cause an accident. Park your car in a safe place to watch or operate the unit.
- Do not use the setup feature or any other function which could divert your attention from the road.
- When backing up your car, be sure to look back and watch the surroundings carefully for your safety even if the rear view camera is connected. Do not depend on the rear view camera exclusively.
- While operating
 - Do not insert your hands, fingers, or foreign objects into the unit as it may cause injury or damage to the unit.
- Keep small articles out of the reach of children.
- Be sure to fasten seatbelts to avoid injury in the event of sudden movement of the car.

Preventing an accident

Pictures appear only after you park the car and set the parking brake.

If the car starts moving during video playback, the following caution is displayed and you cannot watch the video.

[Video blocked for your safety.]

Do not operate the unit or watch the monitor while driving.

Notes on LCD panel

- Do not get the LCD panel wet or expose it to liquids. This may cause a malfunction.
- Do not press down hard on the LCD panel as doing so can distort the picture or cause a malfunction (i.e., the picture may become unclear or the LCD panel may be damaged).



- Do not touch the panel with objects other than with your finger as it may damage or break the LCD panel.
- Clean the LCD panel with a dry soft cloth. Do not use solvents such as benzine, thinner, commercially available cleaners, or antistatic spray.
- Do not use the unit outside the temperature range 0 °C to 40 °C (32 °F to 104 °F).
- If your car was parked in a cold or hot place, the picture may not be clear. However, the monitor is not damaged and the picture will become clear after the temperature in your car becomes normal.
- Some stationary blue, red, or green dots may appear on the monitor. These are called "bright spots" and can happen with any LCD. The LCD panel is precision-manufactured with more than 99.99% of its segments functional. However, it is possible that a small percentage (typically 0.01%) of the segments may not light up properly. This will not, however, interfere with your viewing.

Notes on the touch panel

- This unit uses a resistive touch panel. Touch the panel directly with your fingertip.
- Multi-touch operation is not supported on this unit.
- Do not touch the panel with sharp objects such as a needle, pen, or fingernail. Operation with a stylus is not supported on this unit.
- Do not let any objects contact the touch panel. If the panel is touched by an object other than your fingertip, the unit may not respond correctly.
- Since glass material is used for the panel, do not subject the unit to strong shock. If cracking or chipping occurs on the panel, do not touch the damaged part as it may cause injury.
- Keep other electrical devices away from the touch panel. They may cause the touch panel to malfunction.

About iPhone

Compatible iPhone models:

iPhone XS Max, iPhone XS, iPhone XR, iPhone X, iPhone 8 Plus, iPhone 8, iPhone 7 Plus, iPhone 7, iPhone SE, iPhone 6s Plus, iPhone 6s, iPhone 6 Plus, iPhone 6, iPhone 5

- Use of the Made for Apple badge means that an accessory has been designed to connect specifically to the Apple product(s) identified in the badge, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with an Apple product may affect wireless performance.
- For details, visit the support site on the back cover.

Notice on license

This product contains software that Sony uses under a licensing agreement with the owner of its copyright. We are obligated to announce the contents of the agreement to customers under requirement by the owner of copyright for the software.

For details on software licenses, select [Settings] → [General] → [Open Source Licenses].

Notice on GNU GPL/LGPL applied software

This product contains software that is subject to the following GNU General Public License (hereinafter referred to as "GPL") or GNU Lesser General Public License (hereinafter referred to as "LGPL"). These establish that customers have the right to acquire, modify, and redistribute the source code of said software in accordance with the terms of the GPL or LGPL displayed on this unit. The source code for the above-listed software is available on the Web.

To download, please access the following URL, then select the model name "XAV-AX8000"

URL: http://www.sony.net/Products/Linux/
Please note that Sony cannot answer or respond to any
inquiries regarding the content of the source code.

If you have any questions or problems concerning your unit that are not covered in this Operating Instructions, consult your nearest Sony dealer.

Maintenance

Replacing the lithium battery (CR2025) of the remote commander

When the battery becomes weak, the range of the remote commander becomes shorter.

CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.



Note on the lithium battery

Keep the lithium battery out of the reach of children. Should the battery be swallowed, immediately consult a doctor.

Specifications

Monitor section

Display type: Wide LCD color monitor

Dimensions: 8.95 in/227 mm System: TFT active matrix Number of pixels:

1,152,000 pixels (800 × 3 (RGB) × 480)

Color system:

PAL/NTSC automatic select for CAMERA IN

terminal

Radio section

FΜ

Tuning range:

87.5 MHz – 108.0 MHz (at 50 kHz step) 87.5 MHz – 108.0 MHz (at 100 kHz step) 87.5 MHz – 107.9 MHz (at 200 kHz step)

FM tuning step:

50 kHz/100 kHz/200 kHz switchable

Usable sensitivity: 7 dBf

Signal-to-noise ratio: 70 dB (mono)

Separation at 1 kHz: 45 dB

AM

Tuning range:

531 kHz – 1,602 kHz (at 9 kHz step) 530 kHz – 1,710 kHz (at 10 kHz step)

AM tuning step:

9 kHz/10 kHz switchable

Sensitivity: 32 µV

USB player section

Interface:

USB port: USB (Hi-speed) Maximum current: 1.5 A

Wireless communication

Communication System:

BLUETOOTH Standard version 3.0

Output:

BLUETOOTH Standard Power Class 2 (Max. Conducted +1 dBm)

(Max. Conducted +1 dBill)

Maximum communication range*1: Line of sight approx. 10 m (33 ft)

Frequency band:

2.4 GHz band (2.4000 GHz - 2.4835 GHz)

Modulation method: FHSS

Compatible BLUETOOTH Profiles*2:

A2DP (Advanced Audio Distribution Profile) 1.3 AVRCP (Audio Video Remote Control Profile) 1.3

HFP (Handsfree Profile) 1.6

PBAP (Phone Book Access Profile) 1.1 Corresponding codec: SBC, AAC *1 The actual range will vary depending on factors such as obstacles between devices, magnetic fields around a microwave oven, static electricity, reception sensitivity, antenna (aerial)'s performance, operating system, software application, etc.

*2 BLUETOOTH standard profiles indicate the purpose of BLUETOOTH communication between devices.

Power amplifier section

Outputs: Speaker outputs Speaker impedance: $4 \Omega - 8 \Omega$

Maximum power output: 55 W \times 4 (at 4 Ω)

General

Power requirements: 12 V DC car battery

(negative ground (earth))

Rated current consumption: 10 A

Dimensions (maximum):

Approx. 229 mm \times 136 mm \times 253 mm (9 $^{1}/8$ in \times 5 $^{3}/8$ in \times 10 in) (w/h/d)

Mounting dimensions:

Approx. 182 mm \times 53 mm \times 160 mm (7 1/4 in \times 2 1/8 in \times 6 3/8 in) (w/h/d)

Mass: Approx. 2.4 kg (5 lb 5 oz)

Package contents:

Main unit (1)

Parts for installation and connections (1 set)

Remote commander (1): RM-X170

Ask the dealer for detailed information.

Design and specifications are subject to change without notice.

Copyrights

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Sony Corporation is under license. Other trademarks and trade names are those of their respective owners.

Windows Media is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.

This product is protected by certain intellectual property rights of Microsoft Corporation. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary.

Apple and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries.

Apple CarPlay is a trademark of Apple Inc.

Android Auto is a trademark of Google LLC.

WebLink is a registered trademark of Abalta Technologies, Inc. in the U.S. and a trademark in the other countries.

All other trademarks are trademarks of their respective owners.

Connection/Installation

Cautions

- Do not install this unit in a car that has no ACC position. The display of the unit does not turn off even after turning the ignition off, and this causes battery drain.
- Run all ground (earth) leads to a common ground (earth) point.
- Do not get the leads trapped under a screw or caught in moving parts (e.g., seat railing).
- Before making connections, turn the car ignition off to avoid short circuits.
- Connect the **yellow** and **red** power supply leads only after all other leads have been connected.
- Be sure to insulate any loose unconnected leads with electrical tape for safety.
- Choose the installation location carefully so that the unit will not interfere with normal driving operations.
- Avoid installing the unit in areas subject to dust, dirt, excessive vibration, or high temperature, such as in direct sunlight or near heater ducts.
- Use only the supplied mounting hardware for a safe and secure installation.
- Be sure to use the supplied USB extension cables.
- This unit may not be installed properly depending on the car type. For details on the mounting space, see "Ensuring the mounting location of the unit" (page 11).
- To avoid injury, be careful not to drop the display during installation.
- When installing, be careful not to cut off your fingers with the metal parts of the brackets and mounting base.
- Do not pinch your fingers when attaching the display to the unit.
- Do not install the unit in a position where the unit interferes with driving operations (such as in positions where the shift lever hits the unit, or the hazard button cannot be pressed).
- When using the unit for a long period of time, there may be a possibility that the screws securing the display may come loose. Periodically tighten these screws.
- Do not make any changes or modifications to the unit other than those described in this manual.

Note on the power supply lead (yellow)

When connecting this unit in combination with other stereo components, the amperage rating of the car circuit to which the unit is connected must be higher than the sum of each component's fuse amperage rating.

Note on installing in cars with a start-stop systemThe unit may restart when starting the engine from start-stop. In this case, turn off the start-stop system of your car.

Note on installing in cars with electric parking brake system

For cars with electric parking brakes, some related functions (such as video blocking function) may not work properly.

 
Mounting angle adjustment

Adjust the mounting angle to less than 30°.

Ensuring the mounting location of the unit

Before installing the unit, consult the installer for details on the installation of the unit and the display.


 Make sure that the distance from the front surface (reference surface) of the mounted unit to the surface of your car's center cluster is within 22 mm (7/8 in). If exceeded, the unit cannot be installed properly.



Screw hole positions (for securing the display and the unit)

- **2**2 mm (7/8 in) **3** 51 mm to 71 mm (2 1/8 in to 2 7/8 in)
- For your safety, adjust the mounting location of the unit so that it does not interfere with driving operations such as button (switch) or shift lever operations.

 Hidden area even when the display is slid up or down



Position of the unit (reference position)

● 60 mm (2 3/8 in) ● 76 mm (3 in) ● 60 mm (2 3/8 in)

Parts List for Installation

- ① Power supply leads (1)
- ② Mounting screws (5 × max. 9 mm (7/32 × max. 3/8 in)) (4)





- ③ Microphone (1)
- (4) Flat-mount base (1)





- ⑤ Double-sided tape (1)
- (6) USB extension cable (long) (1)





- (7) USB extension cable (short)
- ® Cable tie (1)





- Connection cable RC-SR1 (1)
- 10 Rear panel covers (L, R) (2)





- ① Joint cover (1)
- (2) Fixing screw (for the joint cover) (3 × 8 mm (1/8 × 11/32 in)) (1)






(3) Fixing screws (for the joint part) (4 × 6 mm (3/16 × 1/4 in)) (4)




This parts list does not include all the package contents.

Connection

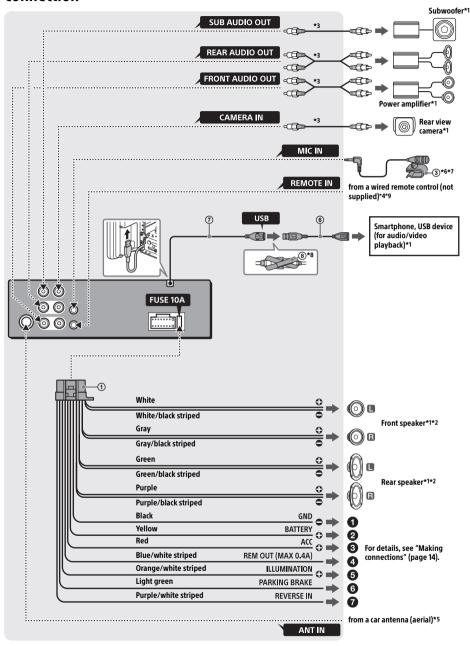

- *1 Not supplied
- *2 Speaker impedance: 4Ω to $8 \Omega \times 4$
- *3 RCA pin cord (not supplied)
- *4 Depending on the type of car, use an adaptor for a wired remote control (not supplied). For details on using the wired remote control, see "Using the wired remote control" (page 15).
- *5 Depending on the type of car, use an adaptor (not supplied) if the antenna (aerial) connector does not fit.
- *6 Whether in use or not, route the microphone input cord so it does not interfere with driving operations. Secure the cord with a clamp, etc., if it is installed around your feet.
- *7 For details on installing the microphone, see "Installing the microphone" (page 14).

 

*9 When using the steering wheel remote control, use the connection cable RC-SR1 (a) as necessary.

Making connections

1 To a common ground (earth) point

First connect the black ground (earth) lead then connect the yellow and red power supply leads.

2 To the +12 V power terminal which is energized at all times

Be sure to first connect the black ground (earth) lead to a common ground (earth) point.

To the +12 V power terminal which is energized when the ignition switch is set to the accessory position

Be sure to first connect the black ground (earth) lead to a common ground (earth) point.

To the power antenna (aerial) control lead or the power supply lead of the antenna (aerial) booster

It is not necessary to connect this lead if there is no power antenna (aerial) or antenna (aerial) booster, or with a manually-operated telescopic antenna (aerial).

To AMP REMOTE IN of an optional power amplifier

This connection is only for amplifiers and a power antenna (aerial). Connecting any other system may damage the unit.

Note

It will take about 10 seconds to shut down the output of REM OUT after the unit is turned off.

 
6 To a car's illumination signal

Be sure to first connect the black ground (earth) lead to a common ground (earth) point.

To the parking brake switch lead

The mounting position of the parking brake switch lead depends on your car.

Be sure to connect the parking brake lead (light green) of the power supply leads ① to the parking brake switch lead.



To the +12 V power terminal of the car's rear lamp lead (only when connecting the rear view camera)

Memory hold connection


When the yellow power supply lead is connected, power will always be supplied to the memory circuit even when the ignition switch is turned off.

Speaker connection

- Before connecting the speakers, turn the unit off.
- Use speakers with an impedance of 4 Ω to 8 Ω , and with adequate power handling capacities to avoid damage.

Installing the microphone

To capture your voice during handsfree calling, you need to install the microphone ③.

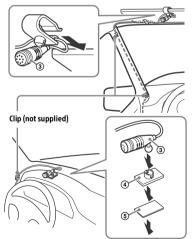

Cautions

- It is extremely dangerous if the cord becomes wound around the steering column or gearstick.
 Be sure to keep it and other parts from interfering with your driving operations.
- If airbags or any other shock-absorbing equipment are in your car, contact the store where you purchased this unit or the car dealer before installation

Notes

- When mounting on the dashboard, remove the visor clip carefully from the microphone ③, then attach the flatmount base ④ to the microphone ③.
- Before attaching the double-sided tape (5), clean the surface of the dashboard with a dry cloth.

Using the wired remote control

When using the steering wheel remote control

Installation of the connection cable RC-SR1 (9) is required before use.

1 To enable the steering wheel remote control, select [General] → [Steering Control] → [Custom] → ② to make the registration.

When the registration is complete, the steering wheel remote control becomes available.

Notes on installing the connection cable RC-SR1 (9)

- Refer to the support site on the back cover for details then connect each lead properly to the appropriate leads.
 Making an improper connection may damage the unit.
- Consulting the dealer or an experienced technician for help is recommended.

When using the wired remote control

1 To enable the wired remote control, set [Steering Control] in [General] to [Preset].

Using the rear view camera

Installation of the rear view camera (not supplied) is required before use.

The picture from a rear view camera connected to the CAMERA IN terminal is displayed when:

- the back lamp of your car lights up (or the shift lever is set to the R (reverse) position).
- you press HOME, then touch [Rear Camera].

Installation

To install the unit and the display securely, be sure to follow the steps 1 to 7 in order.

- 1 Before mounting the unit (page 15)
- 2 Mounting the unit in the dashboard (page 16)
- 3 Attaching the joint cover (page 16)
- 4 Setting up the display (page 16)
- Making sure the mounting positions of the display (page 18)
- 6 Organizing the USB cable (page 18)
- Attaching the display to the unit (page 18)

 
For your safety

After mounting the display to the unit, make sure that the display does not interfere with normal driving operations such as blocking the driver's view or getting the cables tangled.


1 Before mounting the unit

Before mounting the unit in the dashboard, arrange the USB extension cables.

USB cable connection diagram




1 Remove the cable cover, store the USB extension cable (short) ① to the groove of the unit, then attach the cable cover. Position the USB cable so that its connector (male) comes to the front side of the unit.

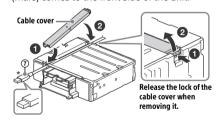

* USB connector (male)

2 Route the USB extension cable (long) (6) inside the dashboard, then connect the USB cable (short) (7) from the unit.

Position the USB cable so that its connector (male) comes out from the center console panel.

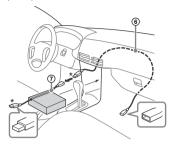


* USB connector (male)

2 Mounting the unit in the dashboard

Using the mounting brackets supplied with your car

You may not be able to install this unit in some makes of Japanese cars. In such a case, consult your Sony dealer.

Example

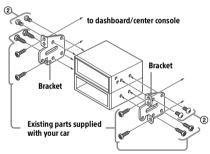


Note

To prevent malfunction, install only with the mounting screws ②.

Attaching the joint cover

 1 Attach the joint cover ① to the mounting base of the unit, then slide it into the unit temporarily.



Setting up the display

The mounting positions of the display can be adjusted.



Depth (within 20 mm (13/16 in), in 3 steps)



 
Height (within 60 mm (2 ³/8 in), in 7 steps)



Angle (-10° to +10°, in 3 steps)

Adjusting the depth of the display position

1 Loosen the 3 pre-installed screws for depth adjustment (on top and both sides).




Pre-installed screws

Slightly loosen the screws until you can slide the connector bracket. Do not remove the screws from the bracket. Doing so may damage the parts.

2 Slide the connector bracket to decide the appropriate depth position.

 
Adjustable depth: within 20 mm ($^{13}/_{16}$ in) (\triangle), in 3 steps, in 10 mm ($^{13}/_{32}$ in) pitch (\bigcirc).



Bracket positions 1 to 3 for the display:

- 1: Slide-out position
- 2: Intermediate position
- 3: Slide-in position

 3 At the desired position, tighten the 3 screws firmly to secure the connector bracket.




Tighten the screws firmly.


When you tighten a screw, be careful not to apply too much torque as doing so may damage the screw (the torque value should be less than 1.5 N·m).

Adjusting the height of the display position

 
1 Remove the 4 pre-installed screws for height adjustment (on both sides).



2 Slide the connector bracket up or down to decide the appropriate height position. Adjustable height: within 60 mm (2 3/8 in) (A). in 7 steps, in 10 mm (13/32 in) pitch (B).

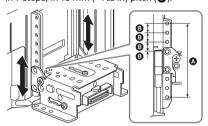

 3 At the desired position, tighten the 4 screws firmly to secure the connector bracket.




Tighten the screws firmly. When you tighten a screw, be careful not to

apply too much torque as doing so may damage the screw (the torque value should be less than 1.5 N•m).


Adjusting the display angle (tilt)

 1 Remove the 2 pre-installed screws for angle adjustment (on both sides).




2 Adjust the display angle to decide the appropriate angle.

 
Adjustable angle: -10° to +10°, in 3 steps



Screw holes to use:

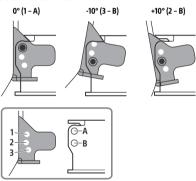

 3 At the desired angle, tighten the 2 screws through the screw holes (upper or lower) that match the display angle.




Tighten the screws firmly. When you tighten a screw, be careful not to apply too much torque as doing so may damage the screw (the torque value should be less than 1.5 N·m).

6 Making sure the mounting positions of the display

Be careful not to pinch your fingers or scratch the center cluster panel of your car when attaching the display to the unit.

 1 Attach the display to the unit temporarily.




2 Confirm that the display does not block the driver's view or interfere with normal driving operations.

If further adjustment of the mounting position (depth, height, angle) is necessary, remove the display from the unit, then adjust it again accordingly.

6 Organizing the USB cable

 1 Connect the USB extension cable (short) ①
to the USB port of the display, then route
the cable along the groove.




To prevent the extension cable from coming off, be sure to route the USB cable along the groove through the catches inside.

Attaching the display to the unit


Be careful not to pinch your fingers or scratch the center cluster panel of your car when attaching the display to the unit.

 1 Attach the display to the unit.



Make sure that the connector brackets of the display is fully inserted to the unit.

 
2 Tighten 4 screws (3) (on top) to secure the connector bracket to the unit.



Tighten the screws firmly.

When you tighten a screw, be careful not to apply too much torque as doing so may damage the screw (the torque value should be less than 1.5 N•m).

 
3 Slide the joint cover ① out to protect the mounting base of the display, then tighten the fixing screw ② to secure the cover.



Tighten the screw firmly.

When you tighten a screw, be careful not to apply too much torque as doing so may damage the screw (the torque value should be less than 1.5 N•m).

4 Attach the rear panel covers (L, R) (1) along the guides for protection.

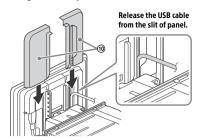

Fuse replacement

When replacing the fuse, be sure to use one matching the amperage rating stated on the original fuse. If the fuse blows, check the power connection and replace the fuse. If the fuse blows again after replacement, there may be an internal malfunction. In such a case, consult your nearest Sony dealer.

Support site

If you have any questions or for the latest support information on this product, please visit the web site below:

https://www.sony-asia.com/support

Help Guide (online manual)

For more details, please visit the following web site and refer to your unit name as shown below.



XAV-AX8000(IN)

https://rd1.sony.net/help/ev/xav-ax80/h_zz/



